



WMTD

Wireless Wall On/Off/Timer Remote Control INSTALLATION AND OPERATING INSTRUCTIONS

This wireless wall on/off/timer remote control – system provides a safe, reliable, and user-friendly remote control for millivolt valve gas appliances. The system can be operated in a timer or manual mode. Always check the appliance home owner’s manual for additional information, or warnings regarding accessory installation before connecting this remote control system.

Carefully inspect the contents for shipping damage. If any parts are missing or damaged, immediately contact the dealer from whom you purchased the kit. Do not attempt to install any part of the kit unless all parts are in good condition. Please keep this booklet for future reference.

CONTENTS OF KIT

Description	Qty
Transmitter	1
Battery Alkaline AAA (for Transmitter)	2
Receiver (Assembly) consists of:	1
Receiver Box with Adapter	
Slide Button-Black (On/RS/Off)	
L-Bracket (Floor Mount)	
Battery Alkaline AA (for Receiver)	4
Wall Cover Plate-Black	1
Wall Cover Plate-White	1
Slide Button-White (On/RS/Off)	1
Screws (for Wall Cover Plate)	2
Plug-In Wiring Assembly – 18” Inches	1
Velcro (Loop and Hook)	1
Wall Anchor Screws	2
Wall Anchor	2
Screws (for fireplace system control covers)	2
Installation Instructions	1

FEATURES/SPECIFICATIONS

- Contemporary Ergonomic Wall Mount Transmitter with LCD Display
- Battery Powered Transmitter
- Compact 18” wire length of plug in Adapter
- Pre-Programmed for Quick Installation
- Low battery Indication
- Child Proof Lock-out
- 16 Security Codes
- Quick Disconnect Wiring Assembly
- On/Off and Timer (30, 60, 90) or (60, 120, 180) minutes Flexibility
- Reset Button

WARNING

Important Safety Information

- Read this manual thoroughly prior to installing, programming or operating any remote control.
- This remote control system is designed for use with a millivolt gas valve system. Do not use this remote control system on applications with voltages above 30 Volts AC.
- This remote control system requires two (2) “AAA” batteries and four (4) “AA” alkaline batteries to power the transmitter and receiver. Wiring must conform to appliance requirement and building codes/ordinances as required by local and national code authorities having jurisdiction.
- Do not short (or jumper) across the gas valve terminals to test the remote control installation. This could damage the unit and void the warranty.
- This remote control system should only be used as described in this manual. Any other use is not recommended and will void the warranty.

NOTE

Due to the sensitive temperature monitoring components in the transmitter, it is necessary to allow the transmitter to stabilize to room temperature before accurate room temperatures are displayed. If the transmitter is activated from a severe cold condition, allow 15 minutes for accurate temperature readings to appear on the LCD.

WARNING

Turn appliance OFF and allow to cool before installing or servicing. **DO NOT** connect 110-120 VAC wiring directly to the milli-volt gas control valve. The remote operator must be installed exactly as outlined in these instructions. Read all instructions completely before attempting installation. Follow instructions carefully during installation. Any modification of components will void the warranty and may cause a fire hazard.

WARNING

Low battery power in the transmitter or receiver can affect the operation of the remote control in the AUTO mode. In some cases the unit may not cycle off when the target temperature is reached.

INSTALLATIONS



Remote Receiver:

The remote receiver may be wall mounted or installed into the appliance per the appliance homeowner's manual. **Refer to the Homeowner's Manual for special installation instructions.** If wall mounted, the remote receiver must be installed in a junction box with cover plate provided. Failure to follow the installation instructions found in the appropriate Homeowner's Manual will void the warranty and may cause a fire hazard.

Installing Batteries:

The remote receiver uses four (4) "AA"- size batteries. To install batteries,

1. Remove the slide switch by gently pulling straight out.
2. Use your thumb and index finger to gently pull down the L-bracket.
3. Open the battery door by pressing the two tabs located on the door, while holding receiver with other hand.
4. Install the batteries as indicated in the receiver cover.
5. Close the battery door until the door tab snaps in place.
6. To install the receiver into a wall junction box, install the receiver with the screws provided .
7. If you decided to install the receiver into the appliance, reinstall the L-bracket..
8. Gently, install the slide switch back to the receiver stem.
9. The batteries should be replaced at least once every 6 months or when the battery indicator flashes.

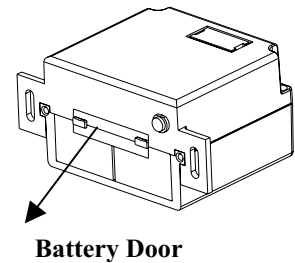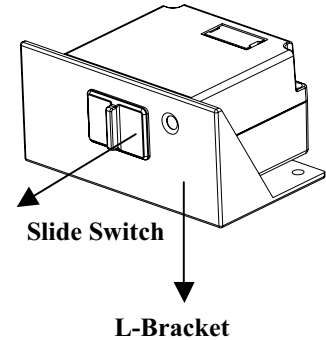

Installing Wire:

This system comes with an 18 inch pre-assembled wire assembly. Insert the white terminal to the back of the receiver. The terminal wire block can only be installed one way. Do not force the terminal plug onto the receiver.

Follow the homeowner's manual for connecting the two (2) 1/4" female spade terminals to the millivolt valve.

For applications longer than 18 inches, use 18 gauge wire, 105°C rated, with as few splices as possible. Connect to the two (2) 1/4" female spade wiring terminals. Wire can be no longer than 20 feet.

WARNING

Make sure that the wires do not contact the appliances any place other than at the terminals. Exposure to temperatures higher than 105C (250°F) may cause the receiver to malfunction or fire hazard.


Wireless Wall Transmitter:

Installing Wireless Transmitter to Wall:


The wireless transmitter can be installed within a radius of 30 feet with no object in between the line of sight of the receiver . Choose a mounting location about 5 feet above the floor in an area with good air circulation (preferably on an inside wall) and away from the following:

1. Air Ducts
2. Radiant heat from the sun and appliances
3. Concealed pipes and chimneys

Installations:

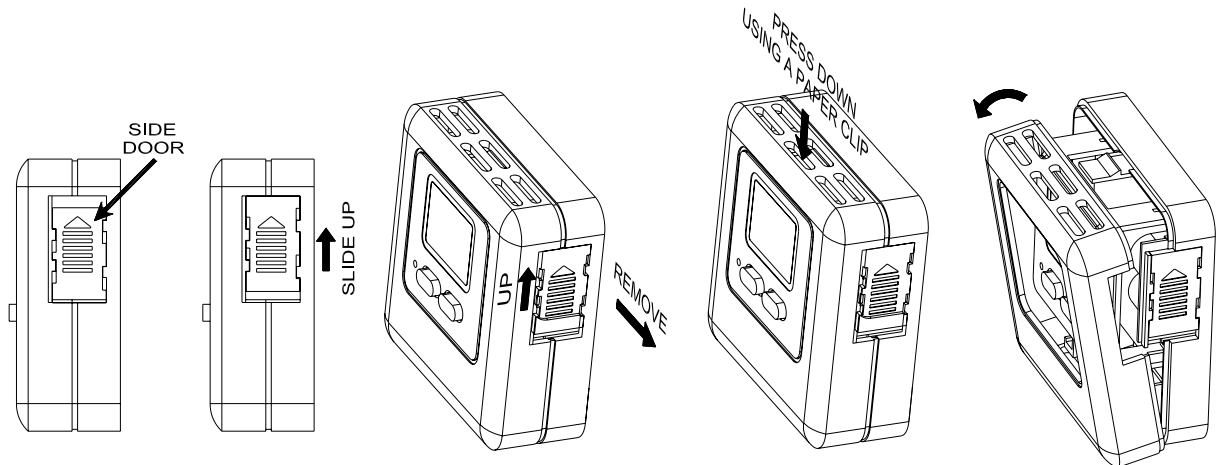

1. To remove the front housing, slide the side door up.
2. Press the tab down to disengage it from the front housing.
3. Align the back housing to the desired location. Mark two (2) holes using the housing.
4. Drill two (2) holes and insert the plastic anchors carefully until they are flush with the wall.
5. Fasten securely the back housing to the wall with the two (2) screws.

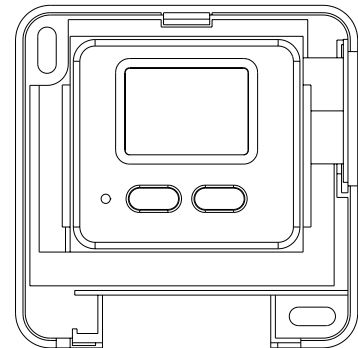


Transmitter: - Back Housing

Installing Batteries:

The wireless transmitter uses two (2) “AAA”- size batteries. To install batteries:

1. Slide the side door up and remove.
2. Insert the two (2) batteries into the cavity as indicated on the side of the transmitter. Make sure the polarity of the battery is correct.
3. Close the side door until it snaps into the housing.
4. The batteries should be replaced at least once every 6 months or when low battery icon come out on the LCD display.

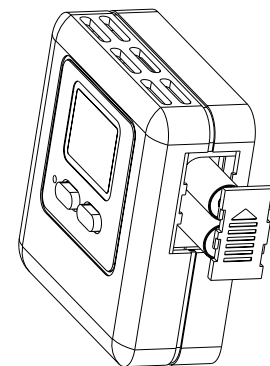


Transmitter: - Batteries Installation

Setting Privacy (DIP) Switch on Receiver and Transmitter:

The receiver and transmitter privacy (DIP) switches are preset at the factory. In the event of activation or interference from other nearby transmissions, reset the code using the following procedure:

1. Slide the code switches on the transmitter or receiver to your choice of ON or OFF position. Switches #1, #3 and #4 are preset to “ON”, and #2 is preset to “OFF” for both the transmitter and receiver.
2. The switches on the transmitter and receiver must match in order for the system to work.
3. The system is now ready to operate.

Dip Switch (Default)

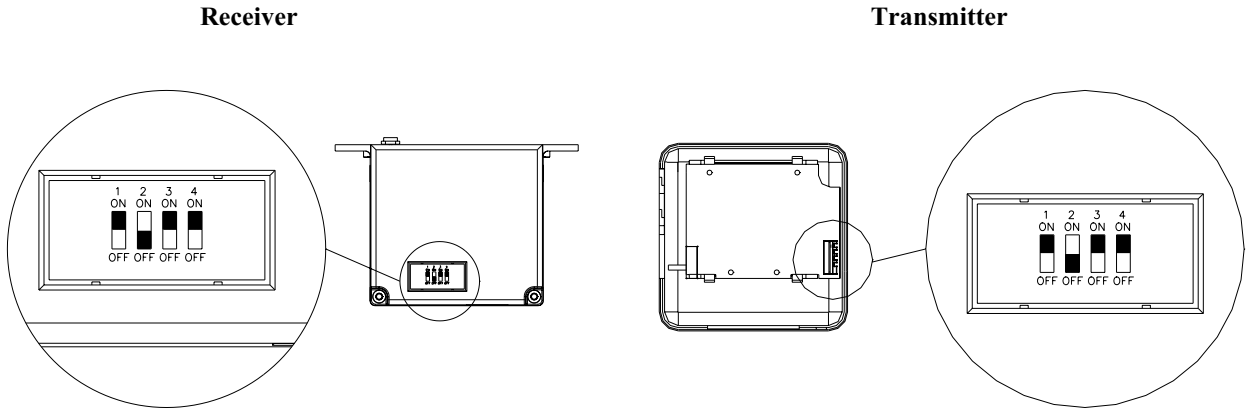


WARNING

Do not use two (2) or more remote control systems in the same area with the same dip switch settings, as they will communicate with each other. This may cause the appliances to malfunction.

OPERATIONS:

Wireless Wall Transmitter:

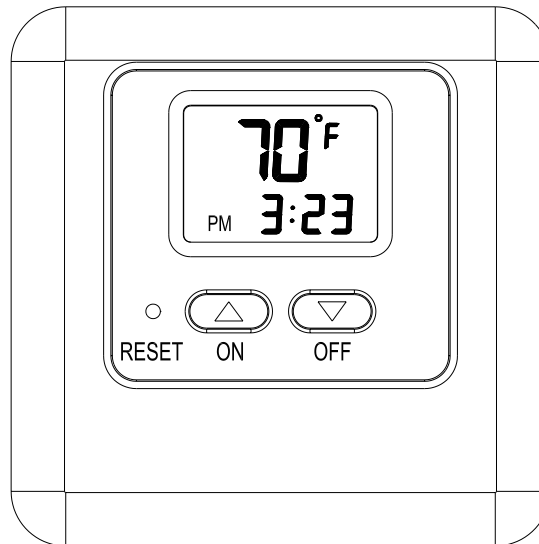

General:

The WMTD Remote Control has two (2) operating modes: Manual and Timer.

The transmitter will operate the remote receiver from 1 foot to a maximum of 30 feet. The distance is reduced when batteries are low or when the receiver is inside a metal enclosure.

Initial start up:




1. After initial power up or RESET button is pressed, the transmitter is reset. The reset button is located in front of the unit.
2. During system reset, all segments of the LCD will be turned on. After one second, the LCD will be initialized and operational. Typical reset displays are shown. Note that the temperature scale is degree F.
3. When reset the transmitter is operating in the manual mode. The time and room temperature are shown.




 
Reset Button:

1. The reset button can be used to reset the systems such as the clock setting. The reset button is located in front of the unit.
2. Using a paper clip, press the button and the system will reset and go into clock setting mode.


Setting Clock:

1. In clock setting mode, only clock and degree is displayed. Press  to advance item (hour, minute or temperature units (F or C)). Selected item is flashing. Press  to select. After setting the time, press  to enter manual mode.




 
Manual Mode:


1. Transmitter comes preset for manual on/off operation.
2. Press the  button once to turn on the appliance. Press the  button to turn it off.

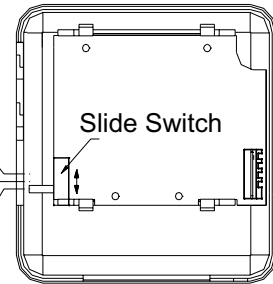MANUAL ON/OFF M
TIMER 30/60/90 T1
TIMER 60/120/180 T2




Timer mode:

1. To select timer mode, remove the housing to access the slide switch.
2. Select timer mode by set the slide switch to position T1 or T2.
3. For T1, default value is 30 min. press  key to increase the setting to 60 or 90 min, or press  key to decrease the setting as desire.
4. For T2, default value is 60 min. press  key to increase the setting to 120 or 180 min, or press  key to decrease the setting as desire.
5. ON signal will transmit after 5 seconds of if key is pressed or 5 seconds after last key was released.
6. OFF signal will transmit when time is up or when setting of slide switch is changed from timer to manual mode.

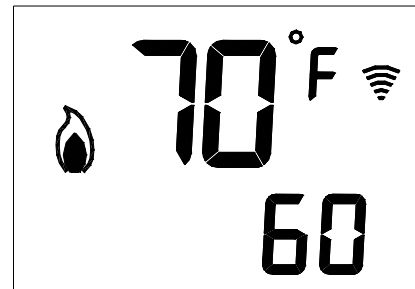

 



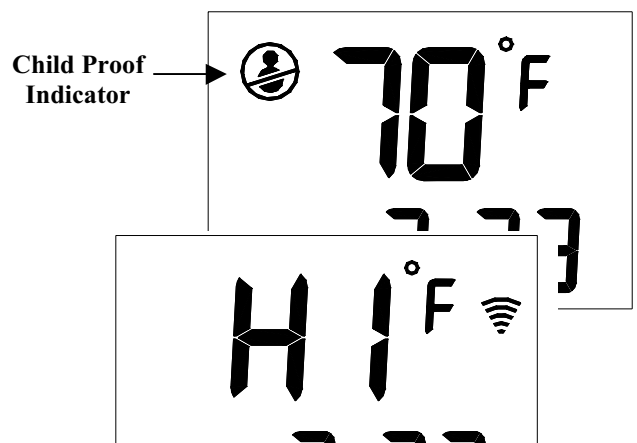
Low-battery detection:

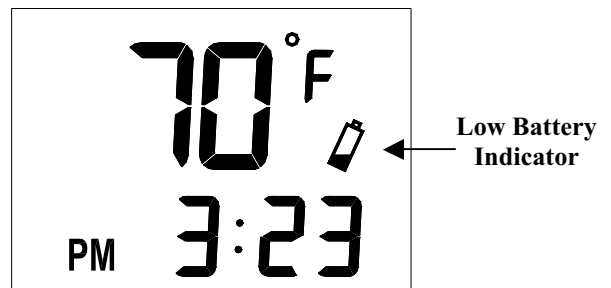1. Battery voltage is checked once a minute. When the battery voltage drops to a certain level, the low-battery warning will come on, and the transmitter **will turn off the appliance**. The transmitter's keypad will not function until fresh batteries are installed.
2. When the batteries are low, the LCD shows a low battery indicator. The low battery warning will be displayed in any mode.
3. The transmitter will not operate with low batteries. Change the battery before the battery is too weak for normal operation. **TURN THE UNIT OFF BEFORE REPLACING BATTERIES.**



Child-proof protection:

1. Press and hold  and  buttons simultaneously for 3 seconds to enter child-proof mode.
2. The transmitter will not work mode until child-proof mode is deactivated by pressing the  and  buttons simultaneously for 3 seconds again to exit child-proof mode.



Transmitter Thermal Shutdown:

1. If transmitter measures a room temperature exceeding 99 degrees Fahrenheit, the LCD will display “HI” and the transmitter will turn off the appliance.
2. Transmitter will not function until the room temperature has dropped below 99 degree Fahrenheit.

Receiver:

Slide Switch:


1. ON position: the system will remain on until the slide switch is placed in the OFF or RS (remote) position.
2. RS (remote) position: the system will only operate if the remote receiver receives a signal from the transmitter.
3. OFF position, the system is off. The slide switch should be placed in the OFF position if you will be away for an extended period of time. If the remote receiver is mounted out of children’s reach, the OFF position also functions as a safety device by both turning the system off and rendering the receiver inoperable.

TESTING YOUR NEW REMOTE CONTROL SYSTEM

1. Connect the wiring terminal to the appliance. Refer to the appropriate Homeowner’s Manual for proper wiring connections to the appliance.
2. Light your gas appliance following the appliance lighting instructions that came with the appliance. Confirm that the pilot light is on; it must be in operation for the remote control to operate the main gas valve. Appliance control knob must be in the ON position. Appliance ON/OFF switch must be in OFF position.
3. Slide the 3 position button on the remote receiver to the ON position. The main gas flame should ignite
4. Slide the button to OFF. The flame should extinguish (the pilot light will remain on).
5. Slide the button to RS (remote), then press the button on the transmitter to turn the system to ON. The main gas flame should ignite.
6. Press the button on the transmitter to turn the system to OFF. The flame should extinguish (the pilot light will remain on).

TROUBLESHOOTING

Symptom	Causes	Action
---------	--------	--------

1. LCD display is blank 2. LCD display shows “funny” display	1. Low Battery	1. Replace batteries. Change batteries every 6 months. 2. Check battery installation and replace batteries. 3. Press Reset button.
4. Appliance does not come on after pressing  on transmitter	1. Wiring / Electrical Connections	1. Slide the switch to ON, if appliance comes ON, wiring is not the cause. 2. If appliance does not come on, check wiring connections.
	2. Privacy (DIP) switch setting on transmitter does not match receiver	1. Make sure the transmitter and receiver has the same DIP switch settings.
	3. Transmitter measures temperature exceeding 99 degrees Fahrenheit and shows “HI” on LCD	1. Move transmitter to a cooler place and wait until temperature drops below 99 degree.
	4. Distance between the transmitter and receiver is more than 30 feet	1. Make sure the operating distance is less than 30 feet
5. Receiver cannot receive signal.	1. Receiver is installed in an enclosure	1. Make sure the receiver is not located inside an enclosure.
	2. Battery installed wrong	2. Install battery correctly in the receiver.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARRANTY

This warranty gives you specific legal rights and you may also have other rights that vary from state to state or province to province. Answers to any questions regarding our limited warranty may be obtained by writing our corporate offices.

Ambient Technologies warrants each new Ambient Technologies remote control against any defects that are due to faulty material or workmanship to the original owner, for a period of five years after the original date of purchase. This warranty and our liability does not apply to batteries, nor does it include damage to merchandise or the remote control resulting from accident, alteration, neglect, misuse, improper installation or any other failure to follow Ambient Technologies installation and operating instructions.

Ambient Technologies agrees to repair or replace at its option any Ambient Technologies remote control under warranty provided it is returned postage prepaid to our warranty facility in a padded carton within the warranty period, with proof of the original date of purchase and a brief description of the malfunction. This limited warranty does not include the cost of removal or re-installation.

Ambient Technologies
149 Cleveland Drive
Paris KY 40361

**FOR TECHNICAL SUPPORT
CALL 800-398-6195**